


Vacuum Wiring Diagram


Dual Voltage

Single Vacuum

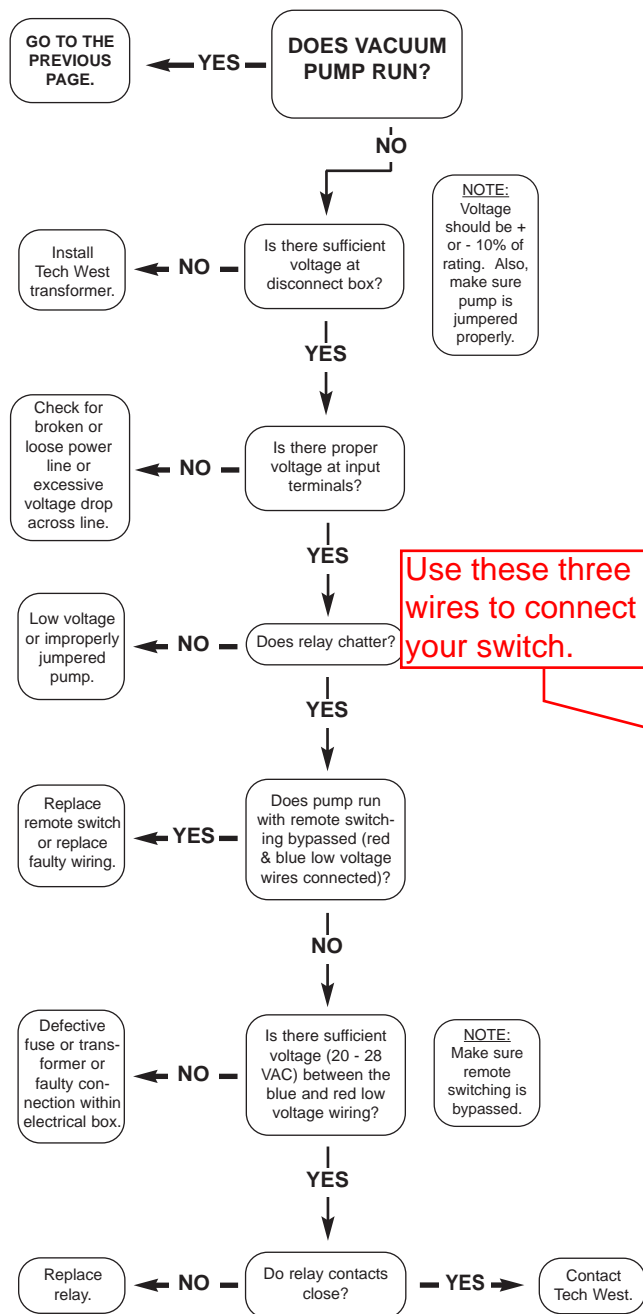


Use these three wires to connect your switch.

Remove this white and black wire from ONE pump.

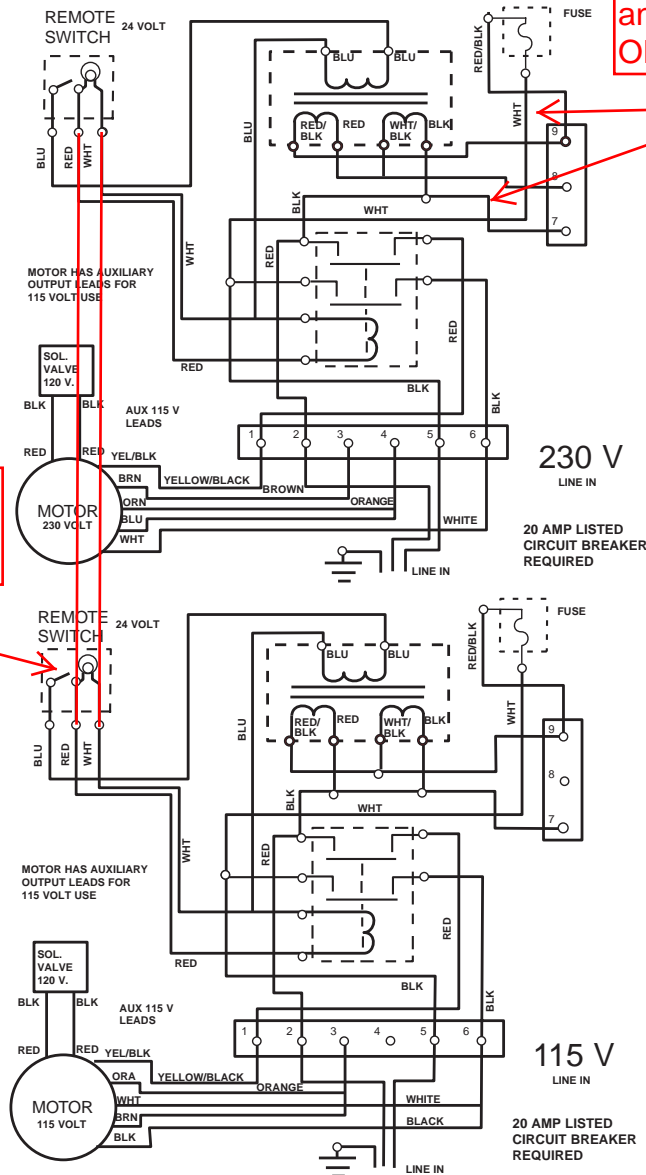


TRANSFORMER LEADS

STEPS TO CHANGE VOLTAGE FROM 230 TO 115 V

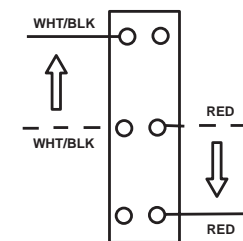

MOVE RED WIRE FROM TERMINAL #8 TO TERMINAL #7 AND THE WHITE/BLACK FROM TERMINAL #8 TO #9. THEN MOVE ORANGE FROM #4 TO #3 THEN BLACK FROM #4 TO #6

STEPS TO CHANGE VOLTAGE FROM 115 TO 230 V

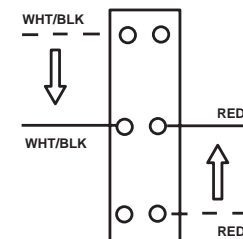

MOVE RED WIRE FROM TERMINAL #7 TO TERMINAL #8 AND WHITE/BLACK FROM TERMINAL #8 THEN MOVE BLACK FROM #6 TO #4 THEN MOVE THE ORANGE FROM #3 TO #4