
Desiccant Dryer

QUICK MAINTENANCE

Use maintenance kit # DDSK-100)



1 Always disconnect power before performing any maintenance.

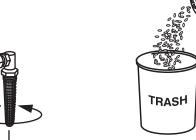


4. Drain Desiccant Dryer Tank

- a. Turn Desiccant tank upside down and remove all contents.
- b. Once empty and clean, reattach Desiccant Dryer tank to the compressor.



- a. Remove top hose and filter ("A").
 Turn counter-clockwise and lift.
- b. Remove hose assy. from bottom ("B")

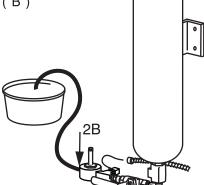


5. Add new beads to dryer

- a. Add white desiccant beads to the Desiccant tank first.
- b. Second, Add brown desiccant beads to the Desiccant tank.
- c. Now reconnect all fittings and attachments to the Desiccant tank.


3. Remove Desiccant Air Dryer from compressor

 a. Remove (4) bolts ("C") which hold the Desiccant Air Dryer to compressor

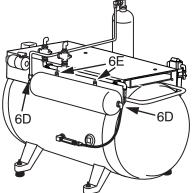

6. Remove and drain the Purge Tank

- a. Remove hose fitting from both ends of the Purge Tank (D).
- b. Remove Purge tank mounting bolts (E).
- c. Completely empty Purge Tank then reattach to compressor.
- d. Reconnect hose fittings.

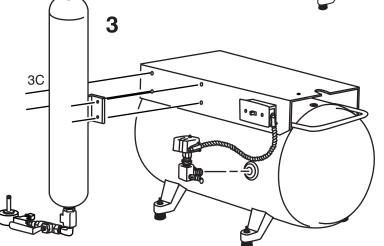

7. Install New Moisture Indicator

- a. Unscrew old indicator and replace with new indicator.
- b. Indicator should be light blue in color.