


Figure 16
Support Plate for
Metal Stud Wall
Mount

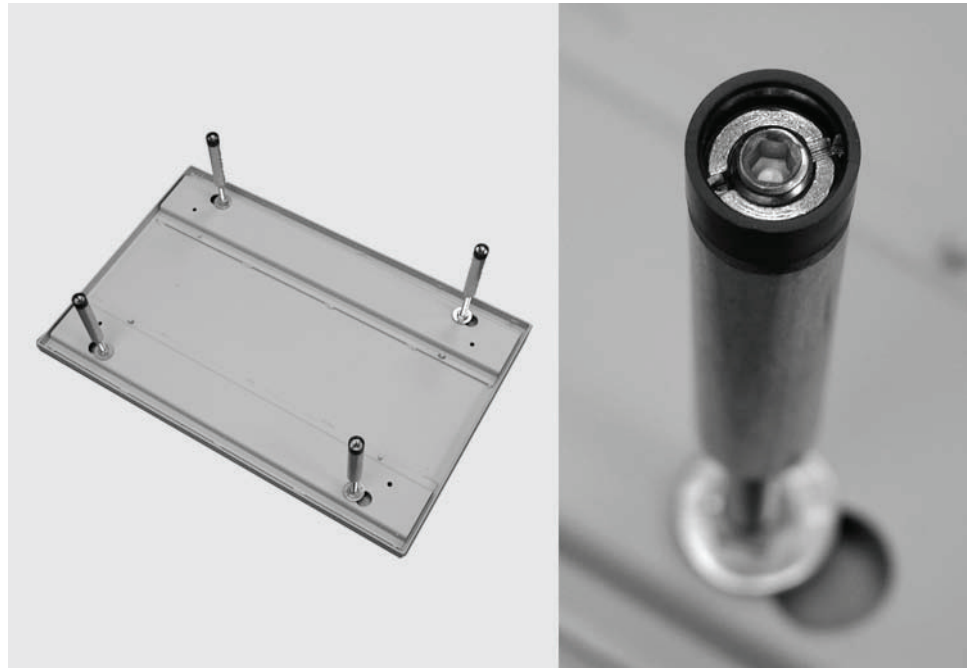

Install the Wall
Plate (30-A2042)

1. Select the 5/16-inch 1-inch long hex bolts.
2. Put the hex bolts through the mounting holes on the wall plate and loosely tighten. Be sure that the power wire extends through the opening in the wall plate.
3. Level the wall plate.
4. Tighten the hex bolts

Remove Control
Unit Front Cover

1. Open the shipping carton and locate the Control Unit in the first level of the carton.
2. Remove the socket flathead screw from the front cover of the Control Unit.
3. Carefully remove the front cover.
4. Place the front cover and the screw in a safe location for later reassembly.

Mount the
Control Unit

1. Select the 5/16-inch ¾-inch long socket cap screws and washers.
2. Put the upper screw and washer through the upper mounting hole of the Control Unit.
3. Place the Control Unit on the wall and loosely tighten the upper screw.
4. Put the lower screw and washer through the lower mounting hole of the Control Unit and loosely tighten. Be sure that the power wire extends through the opening at the bottom of the Control Unit.
5. Place a level on the Control Unit bearing parallel to the wall. Level the Control Unit.
6. Tighten the upper and lower screws.
7. After the Preva is installed, slide covers on the wall plate and screw on.